

B17/11




FOR LIGHT DUTY MOBILE APPLICATIONS

MODELS	B17/11
Maximum reach (incl. nominal breaker), m	4.0
Horizontal reach, max (breaker vertical), m	2.9
Vertical reach, max (incl. nominal breaker), m	1.8
Nominal breaker length, m	1.4
Swing	270
Number of boom sections	2
Operating mass, excluding breaker PowerPack and control console, kg	1000
Recommended breaker weight, kg	200-400
Foundation plate dimension, m	0.65
Lift boom length, m	1.75
Dipper boom length, m	1.1
Dipper extension boom length, m	n/a
Radial raking max, kg	n/a
Axial raking max, kg	n/a

B17/11

REACH CURVES

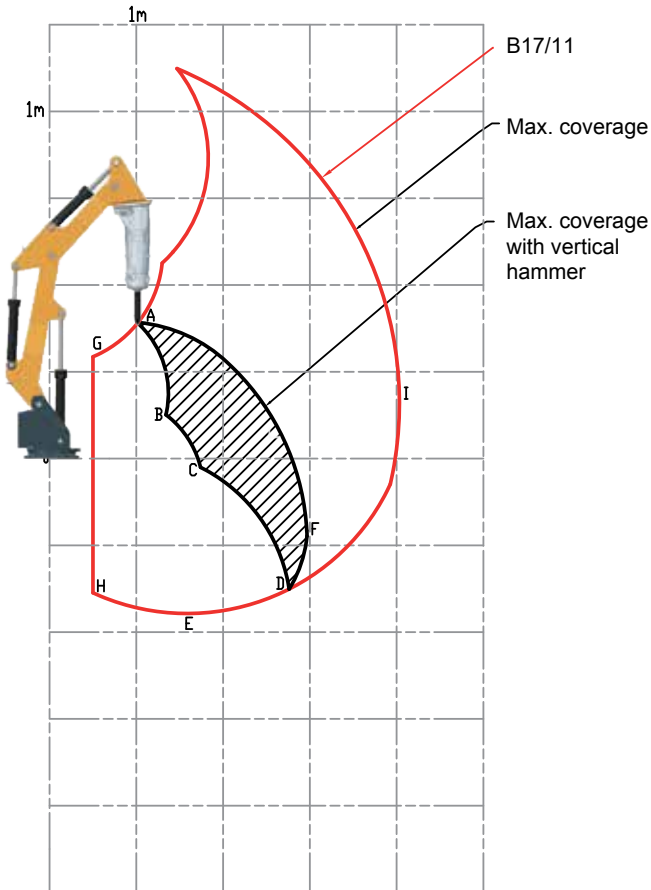

COORDINATES	B17/11
A	1.0 ; 1.6
B	1.3 ; 0.5
C	1.7 ; -0.1
D	2.8 ; -1.5
E	1.7 ; -1.8
F	3.0 ; -0.9
G	0.5 ; 1.2
H	0.5 ; -1.6
I	4.0 ; 0.8

Reach coordinates (x ; y) based on the typical breaker length.

BREAKER WEIGHT - POWERPACK REFERENCE (50Hz)	B17/11
200-400kg	BPP18

CONFIGURATION	B17/11
Hydraulic breaker	-
Powerpack	o
Control seat	-
Control stand	-
Radio remote control	o
Autolube	o
Hosetower	-
Flexibase	-
Hour meter breaker	-
Cabin, Protection glass	-

• standard o option + accessory - not available
More about the boom accessories see separate brochure.

HEAD OFFICE

Western Australia

Local Call: 1300 127 091

International Call: +61 (0) 8 9270 8555

Email: wasales@transmin.com.au

Address: 33-37 Denninup Way Malaga
Perth, Western Australia, 6090

INTERNATIONAL OFFICES

South America Email: sales.sa@transmin.com.au

North America Email: sales.ca@transmin.com.au

India Email: sales.in@transmin.in

www.transmin.com.au



Western Australia:
breakerswa@baeg.com.au

Queensland & NT:
breakersqld@baeg.com.au

B17/12, B17/12/12




FOR MEDIUM DUTY MOBILE APPLICATIONS

MODELS	B17/12	B17/12/12
Maximum reach (incl. nominal breaker), m	4.6	5.8
Horizontal reach, max (breaker vertical), m	3.1	4.4
Vertical reach, max (incl. nominal breaker), m	2.4	3.7
Nominal breaker length, m	1.7	
Swing	270	
Number of boom sections	2	3
Operating mass, excluding breaker PowerPack and control console, kg	1450	1680
Recommended breaker weight, kg	300-600	
Foundation plate dimension, m	0.8	
Lift boom length, m	1.75	
Dipper boom length, m	1.25	
Dipper extension boom length, m	1.25	
Radial raking max, kg	n/a	
Axial raking max, kg	n/a	

B17/12, B17/12/12

REACH CURVES

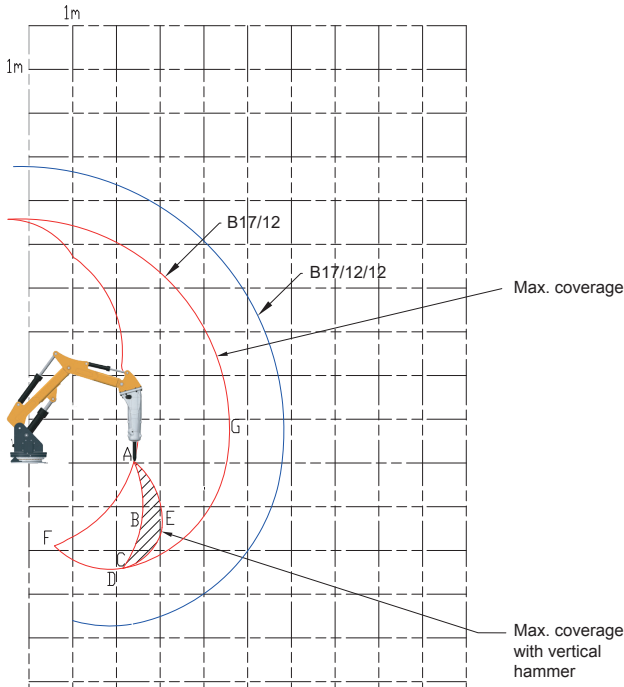

COORDINATES	B17/12	B17/12/12
A	2.4 ; 0.1	2.1 ; 1.3
B	2.6 ; -1.3	2.8 ; -1.6
C	2.2 ; -2.4	2.4 ; -3.6
D	1.9 ; -2.4	2.0 ; -3.7
E	3.1 ; -1.3	4.3 ; -1.4
F	0.6 ; -1.9	1.0 ; -3.6
I	4.6 ; 0.8	5.8 ; 0.8

Reach coordinates (x ; y) based on the typical breaker length.

BREAKER WEIGHT - POWERPACK REFERENCE (50Hz)	B17/12	B17/12/12
250-600kg		BPP18

CONFIGURATION	B17/12	B17/12/12
Hydraulic breaker		-
Powerpack		o
Control seat		-
Control stand		-
Radio remote control		o
Autolube		+
Hosetower		-
Flexibase		-
Hour meter breaker		-
Cabin, protection glass		-

• standard o option + accessory - not available
More about the boom accessories see separate brochure.

HEAD OFFICE

Western Australia

Local Call: 1300 127 091

International Call: +61 (0) 8 9270 8555

Email: wasales@transmin.com.au

Address: 33-37 Denninup Way Malaga
Perth, Western Australia, 6090

INTERNATIONAL OFFICES

South America Email: sales.sa@transmin.com.au

North America Email: sales.ca@transmin.com.au

India Email: sales.in@transmin.in

www.transmin.com.au



Western Australia:
breakerswa@baeg.com.au

Queensland & NT:
breakersqld@baeg.com.au